

"04" - The throttle has not returned to its correct position

Error code	Cause	Result
04	The throttle has not returned to its correct position.	The display shows the error code 04.

Component Description

The throttle is the signal input part of the controller. The throttle signal is the driving signal for the working of the motor.

Component Location

The throttle is installed on the handlebar.

Conditions for Running the Diagnostics

After the system is turned on, the diagnosis runs continuously.

Error Phenomenon

The display shows the error code 04.

Conditions for Clearing the Error Code

After the diagnosis runs and passes, the system works normally.

Troubleshooting

Step 1 Check if the throttle is stuck

Specification	Solution
The throttle is stuck.	Replace the throttle.
The throttle is not stuck.	Replace the controller.

Step 2 Clear the error code

Conditions: Connect all components, Turn on the system.

Specification	Solution
Error code 04 is in active.	Repair complete.
Error code 04 is active.	Return to the step 1 or contact BAFANG if all steps have been completed and checked again.