

"11" - Motor temperature sensor fault

Error code	Cause	Result
11	Motor temperature sensor fault.	The display shows the error code 11 and the motor cannot work.

Component Description

The motor temperature sensor is used to measure the temperature inside the motor.

Component Location

The temperature sensor is installed inside the motor.

Conditions for Running the Diagnostics

After the system is turned on, the diagnosis runs continuously.

Error Phenomenon

The display shows the error code 11 and the motor cannot work.

Conditions for Clearing the Error Code

After the diagnosis runs and passes, the system works normally.

Troubleshooting

Step 1 Replace the motor.

Step 2 Clear the error code

Conditions: Connect all components, Turn on the system.

Specification	Solution
Error code 11 is inactive.	Repair complete.
Error code 11 is active.	Return to the step 1 or contact BAFANG if all steps have been completed and checked again.